

AM6 MINI

Mini Electric Air Pump

User Manual

Air Pump User Manual

List

- ① Mini Air Pump
- ② Quick release AV
- ③ Quick release FV
- ④ TYPE-C Charging Cable
- ⑤ Storage bag




About Charging

- 1. Never charge the device unattended. Always unplug the charging cable after the battery is fully charged.
- 2. Use only certified chargers bearing the following marks: [FCC, CE, RoHS]
- 3. During charging, the battery indicator flashes intermittently. A steady light indicates full charge.
- 4. For first-time use or after prolonged storage, fully charge the device before use.
- 5. When powered off, briefly press the switch to display the battery level via the indicator light.

Indicator Light (Blue)	Steady On	Slow	Fast
Battery power	67~100%	33~66%	1%~32%

Function Introduction

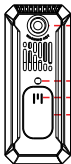

Inflation Nozzle

Lighting lamp

Battery Indicator Light

On/Off

Type-C
Charging Port



Button Instructions



Start Inflation

Long press: Power on and start inflation (can start under high pressure)

When powered on:

1. Single press to stop or start inflation.
2. Long press to power off (or automatically powers off after 30 seconds of stopping inflation).

Light On/Off

Double press: Turn light on or off

Display Battery Level

Single press while powered off: Indicator displays battery level

I Quick-Release Valve Installation



I Notes


1. Valve heating during operation is normal! Avoid touching the valve to prevent burns!
2. This product is not waterproof. Exercise caution during daily use.
3. The AM6 MINI is not a toy. Do not allow children to use it unsupervised to prevent injury.
4. This product comes with a one-year warranty. Disassembly or damage caused by misuse may void warranty coverage or incur repair fees.
5. For product quality or usage issues, contact your retailer or our customer service email: cyclami@outlook.com

E-Mail : cyclami@outlook.com

Address: 2nd Industrial Building, 7th floor, No. 16, JINGLE Road
Xiangzhou District, Zhuhai City, Guangdong Province.



- www.cyclami.com -

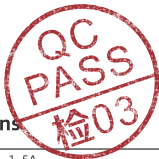

AM6 MINI Specifications

Current	1~5A
Battery	400mAh 7.4V
Charging voltage	5V-1A
Charging port	Type-C
Size	75x43x31mm
Weight	≈145g
MAX Inflation	Max 130PSI / 9BAR