

- Instruction manual -

CYC1800

Hoisting Bicycle Lights

✉ E-Mail: cyclami@outlook.com

🌐 Web: www.cyclami.com

📍 Address: 7th Floor, Second Industrial Building, No. 16 Jingle Road,
Xiangzhou District, Zhuhai City, Guangdong Province, China

Bicycle Headlight Instruction Manual

 
List

① CYC1800

② Remote control

③ GoPro bracket

④ TYPE-C charging cable



Parameter

Lumen	500 ~ 1800Lm
Light Mode	Low / Medium / High / Ultra / Strobe / SOS
Battery	4000mAh
Battery Life	Approx. 3.5~12H (lab data)
Material	Aluminum alloy + Nylon
Waterproof	IPX4
Dimension	68x53x45.5 mm
Weight	≈185g

Light Button Operation Mode

The headlight has 6 light modes: Low / Medium / High / Ultra / Strobe / SOS.

After powering on the bike, switch the light modes by clicking on the headlight button.

Click cycle	Ultra	→	High	→	Medium	→	Low
-------------	-------	---	------	---	--------	---	-----

Strobe and SOS modes:

1. Double-click the headlight button to switch the blinking mode.
2. In blinking mode, click the lamp button to switch between SOS or Strobe mode.

Mode Memory: When turn on again, the working mode is the same as the mode before the last time it was turned off.

Lighting Mode

Lighting	Low	Medium	High	Ultra	Strobe	SOS
Continuity	12 H	9 H	6 H	3.5 H	/	/
Range	100 M	150 M	180 M	200 M	200 M	200 M
Lumens	500Lm	800 Lm	1200 Lm	1800 Lm	1800 Lm	1800 Lm

Battery reminder and charging

Tap the light switch button in standby:

The battery level is about 10~100% when the button is green light, and about 0~10% battery level when it is red light.

Charging with Type-C:

The button lights up red when charging and green when full.

Remote control code pairing

Long press the headlight button for 3 seconds to enter the code pairing mode (headlight indicator light breathes and blinks). Then bring the remote control close to the headlight and press any key of the remote control (the headlight indicator will flash rapidly for 1 second), the code pairing will be completed when the flashing ends.

Remote control use mode

ON/OFF button: Tap to control the light on/off.

MODE button:

Click: switch Ultra / High / Medium / Low.


Double click: enter blinking mode (click to switch SOS or Strobe mode under blinking mode).




Note:

1. Please pair the remote control before using it for the first time.
2. If you don't use the remote control for a long time, it will be disconnected from the bike light, and you need to long press the remote control ON/OFF button to wake up the connection with the bike light again.

Lights Installation

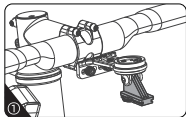


1. Install the GoPro bracket to the extension bracket;

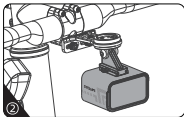


2. Slide the lights into the GoPro bracket and finish the installation;

Remote Control Installation

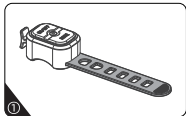


1. Install the strap bracket to the remote control;

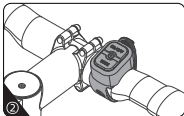

2. Install the remote control to the bike handlebar;

I Operating Instructions

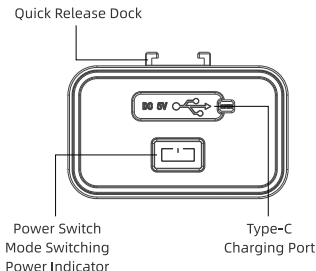

I Precautions

Do not shine the light directly into your eyes to avoid damage to your eyes.

It is normal for the head of the lamp to heat up after a long time of illumination.

When the product is used for the first time in the package, please let the headlight charge once to ensure normal use.

Human damage, damage caused by misuse of the product is not covered by the warranty.

CYCLAMI products have a 1 year after-sales warranty, more than 1 year maintenance charge for parts and transportation costs, in case of product problems you can contact us by email: cyclami@outlook.com