CYCLAMI

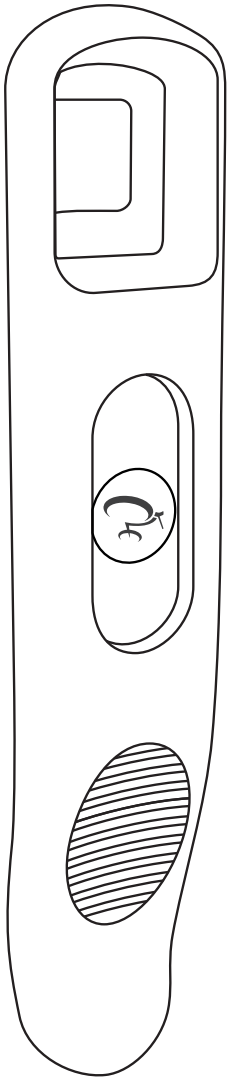

PRYING TYRE BAR

Compact Bicycle Tire Lever

- User Manual -

Tire Lever Dimensions

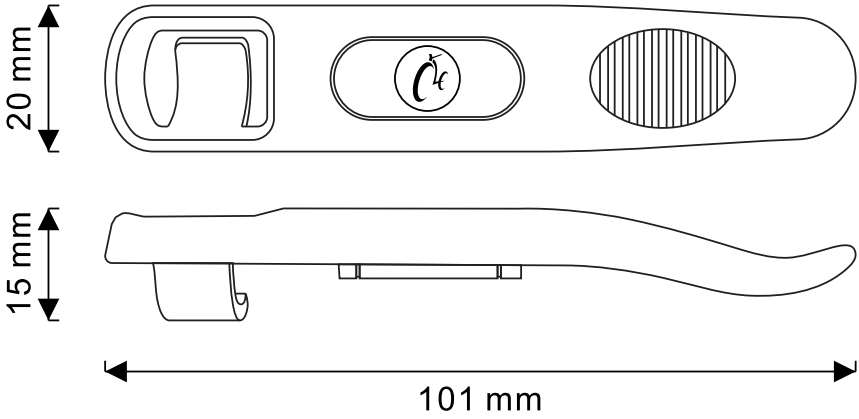

Tire Lever Usage

1. Use the tire lever to pry the tire bead off the rim, then hook it onto a spoke to hold it in place.

2. Use a second tire lever to work around the rim and remove the tire completely.

E-Mail : cyclami@outlook.com
Address: 2nd Industrial Building, 7th floor, No. 16, JINGLE Road Xiangzhou District, Zhuhai City, Guangdong Privince.

CYCLAMI

- www.cyclami.com -

PRYING TYRE BAR

Material	Plastic
Size	20x15x101mm
Weight	10.6g
Applicable to	Bicycle Tires