



CYCLAMI


A2S PUMP

User Manuals

MINI Electric Pump Manual

Accessory List


- ① MINI pump
- ② Extension hose
- ③ Presta adapter
- ④ American adapter
- ⑤ Ball Needle
- ⑥ Silicone Case
- ⑦ Type-C USB

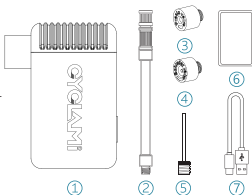

Parameter

Operating Current	1~7A
Battery Information	2*500 mAh 7.4V
Charging Method	Type-C 5V 1.5A
Charge time	45min
Product Size	73,6*45*28,6mm
Weight	136g
MAX Air Pressure	MAX 120 PSI

Function

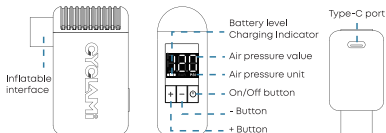


■ Nozzle Switching



③ Presta nozzle




④ Schrader nozzle



⑤ Ball nozzle

* The factory setting is assembled with French nozzle, please switch when using the American nozzle, when using, please press the body to avoid air leakage.

■ Air Tube Switching

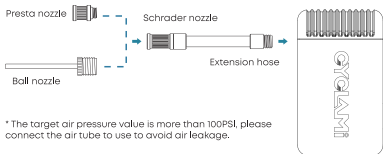

* The target air pressure value is more than 100PSI, please connect the air tube to use to avoid air leakage.

■ Pressure setting



Long press (power button), the screen will light up and the default air pressure value is 100PSI

Press[+] to increase air pressure, press[-] to decrease air pressure, and the screen will display the target air pressure value.

Simultaneously pressing the[+] and [-] keys can switch between PSI or BAR



Start inflating

Shortly press the [On/Off] key under power-on condition, the product will start to inflate, reach the target air pressure value, and the product will stop inflating automatically.

Power off

After use, long press the [On/Off] key to turn off the product. The product will shut down automatically if there is no operation within 1 minute after the product is turned on.

About Charge

1. Use an adapter charging device to charge the product.
2. In charging mode, the battery indicator on the screen will light up, blinking one by one depending on the battery level, and it will stay on when charging is complete.
3. For first time use or long term non-use, please charge the pump before inflating.

Attention

1. When the product is continuously inflated for 1 minute and the air pressure value is always less than 5PSI, it will automatically stop to prevent continuous ineffective work.
2. The product will automatically stop after 3 minutes of continuous inflation to avoid continuous work due to abnormal conditions.
3. When the internal temperature of the product exceeds the upper limit, it will stop working immediately and the screen will display the character [HOT], it is recommended to wait for the product to cool down before using it.
4. During the inflatable process, hold the product and press the air inlet valve throughout the connection, if you hear the sound of air leakage, please adjust to the posture or angle of the pressure until the sound of air leakage disappears.
5. The product has a one-year warranty, man-made damage or damage caused by improper use is not included in the after-sales.
6. Please contact the seller or our after-sales e-mail: cyclami@cyclami.com for product quality or use problems.