


PETKIT™


USER MANUAL

PETKIT PUROBOT MAX PRO 2 WITH CAMERA
SELF-CLEANING CAT LITTER BOX

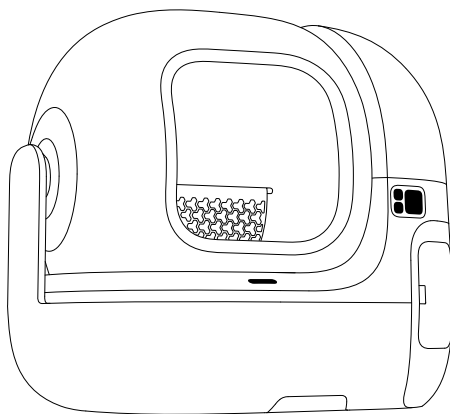

01 PACKAGE LIST


* Before installation and use, please check if all the accessories are complete according to the following list :

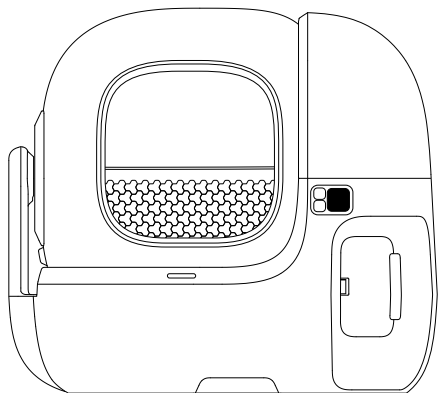

Main Unit



User Manual




Power Adapter




Pet Odor Eliminator N60
(Used in the smart odor eliminator)




Pet Odor Eliminator N50 2.0



Honeycomb Fine Litter Sifter P99023
(Exclusive for mineral cat litter)

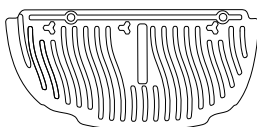


Magnetic Cat Litter Remover




Trash Bag

02 PRODUCT DESCRIPTION

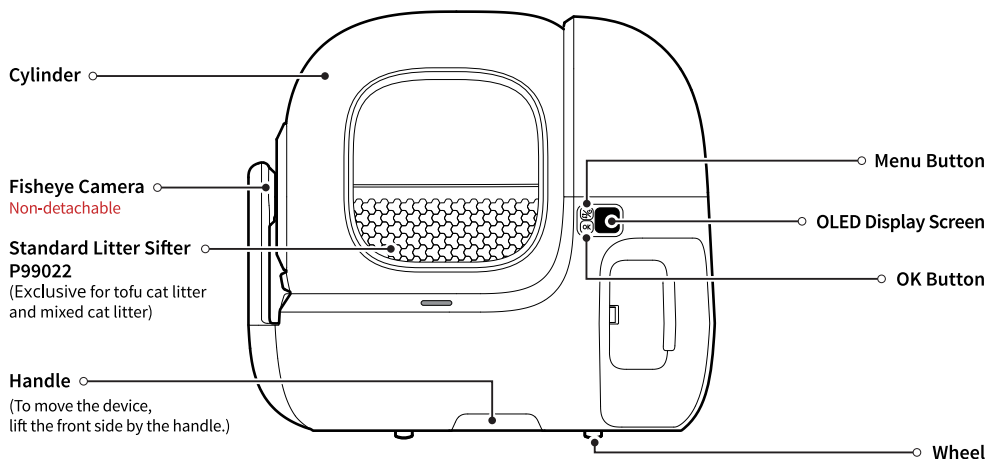

* Due to continuous product improvements, there may be slight differences in the actual product (including but not limited to appearance, structure, and color). The product images displayed on packaging and promotional materials are for reference only.

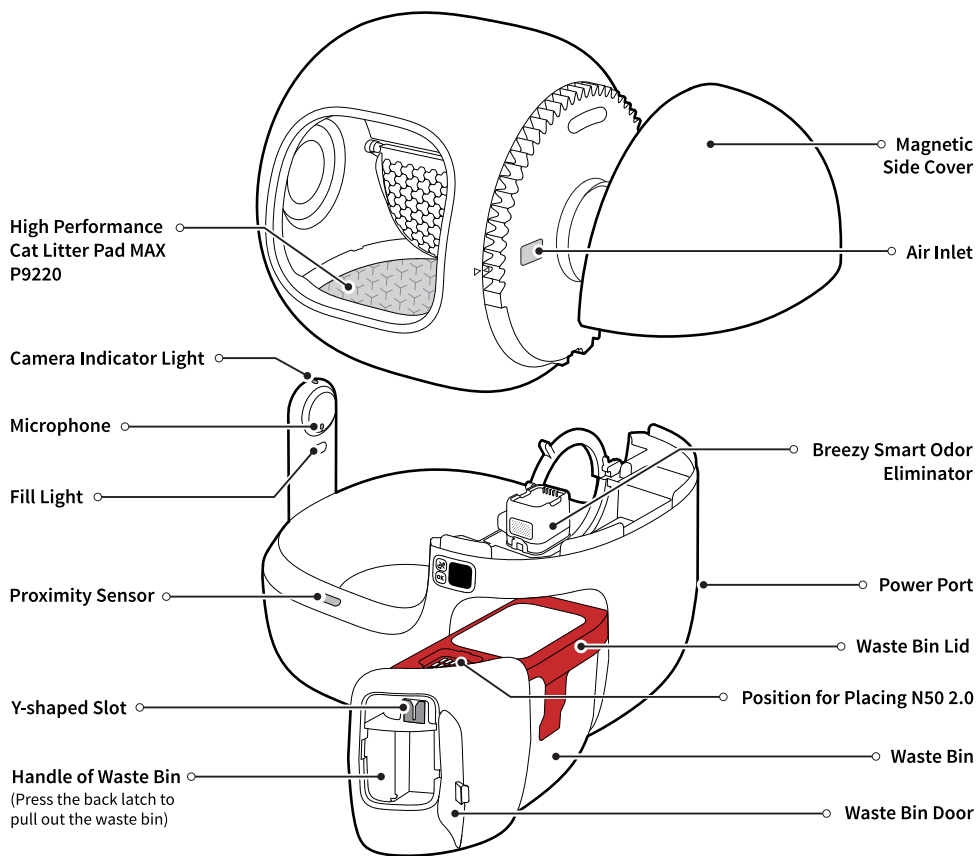

Introduction to Component Functions


Component Name	Functional Description
Fisheye Camera	Real-time monitoring of pet toileting
Litter Sifter	Effectively filter clumps without jamming or missing
High Performance Cat Litter Pad MAX P9220*	Anti-stick, waterproof, scratch-resistant, and easy to clean
Pet Odor Eliminator N50 2.0*	Decompose the odor in the waste bin to prevent the odor from spreading
Y-shaped Slot	Used to secure the drawstring of trash bag. Pack the trash bag without pulling out the waste bin
Handle	Easy to lift and move the device
Breezy Smart Odor Eliminator*	Non-irritating; Keep the air in cylinder fresh

- * High Performance Cat Litter Pad MAX P9220 is hereinafter referred to as litter pad.
- * Pet Odor Eliminator N50 2.0 is hereinafter referred to as N50.
- * Breezy Smart Odor Eliminator is hereinafter referred to as smart odor eliminator.


03 PRODUCT INSTALLATION

3.1 Install Trash Bag

❶ Press the latch to the right to open the door.

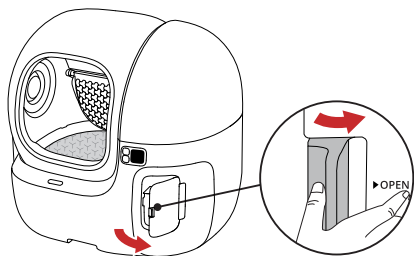


❷ Press the back latch to pull out the waste bin.

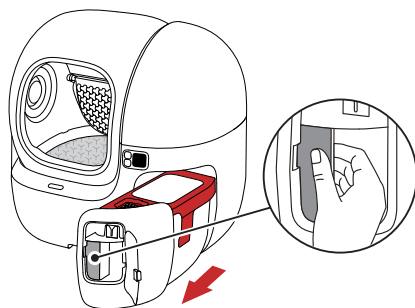


❸ Remove the lid and place the trash bag in the waste bin, ensuring that the trash bag lies flat at the bottom.

Note: Fold the trash bag along the dashed line, ensuring that the dashed line is on the edge of the waste bin.

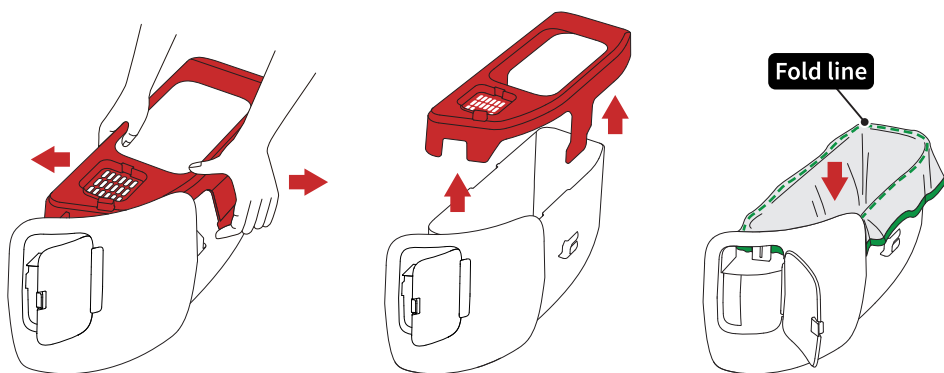


- ④ Pull the drawstring through the Y-shaped slot to secure it.

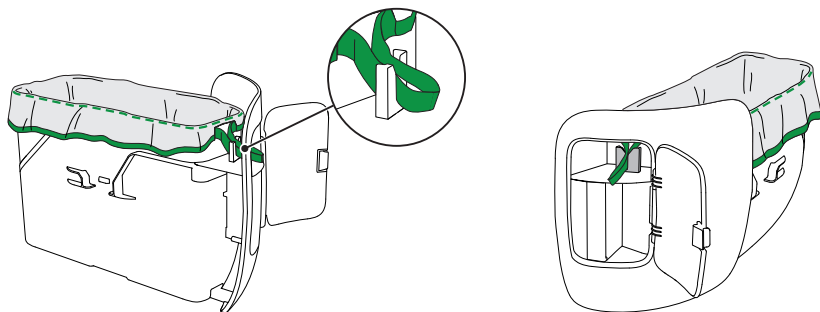


- ⑤ Install the lid.

Note: The buckles should not press against the drawstring, and check if the dashed line is on the edge of the waste bin.

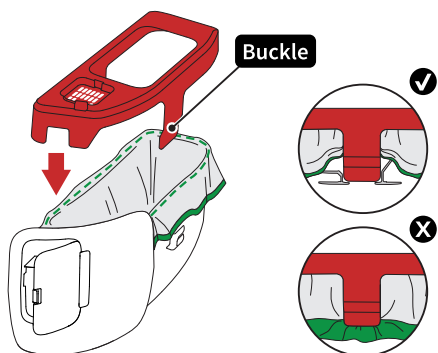


3.2 Install N50 and N60


❶ Put the N50 in and press firmly to secure it.

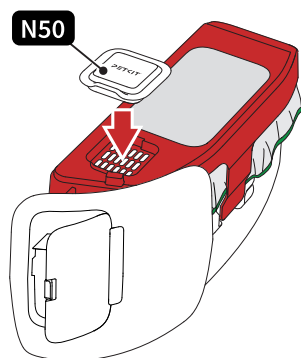


❷ Install the waste bin back.

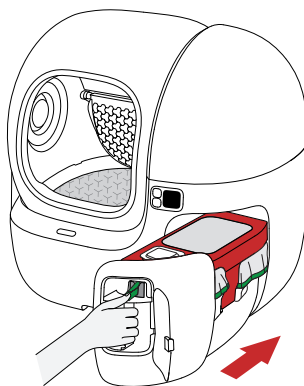


❸ Close the door.

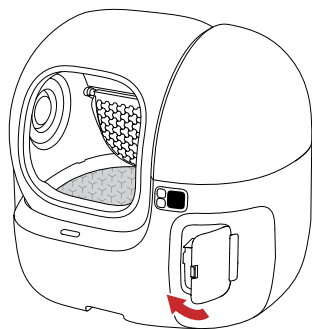


❹ Remove the magnetic side cover.

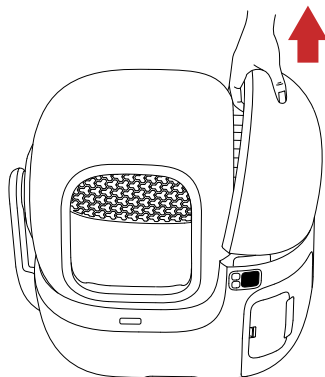


5 Put the N60 in the smart odor eliminator.

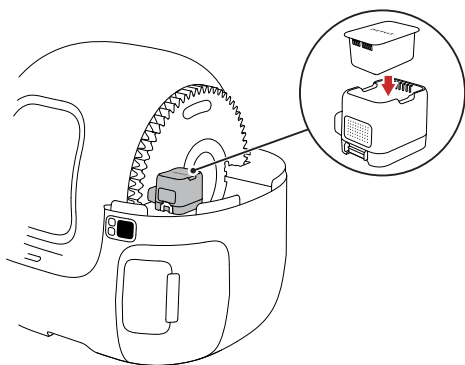

6 Install the magnetic side cover back.

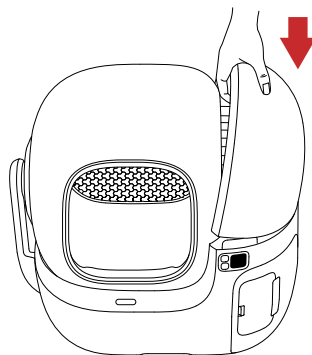

7 Insert the power adapter into the device and connect it to the power source.

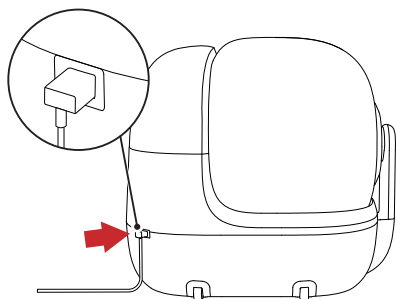


04 PRODUCT USAGE


4.1 Device Binding

Note: Please bind the device to the App before using it for the first time. The device can be used only after successful binding.


❶ Download the PETKIT App from the App Store or Google Play. Or scan the QR code to download and install.

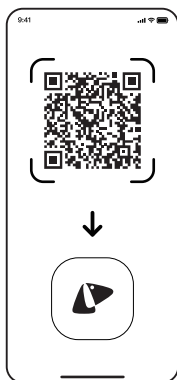

❷ Open the App, click “+” to add the corresponding device, and bind the device according to the guide.

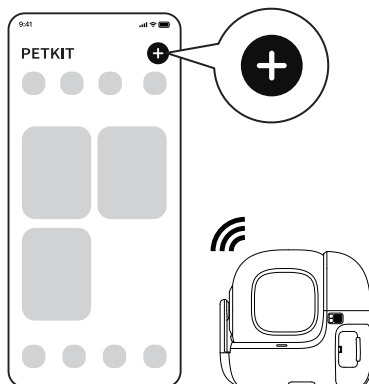

❸ When the screen displays the following icon, the binding is successful.

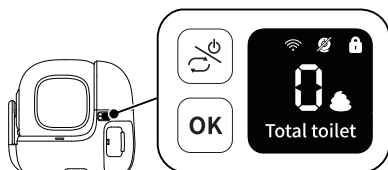


More smart settings
can be operated in
the App.




4.2 Pour in Cat Litter

Note: The size of cat litter should not exceed 12 mm(0.47 in) in length and 3 mm(0.12 in) in diameter.

❶ Press  to switch to “Maintenance Mode”, then press  to execute this function, and the cylinder begins to rotate.

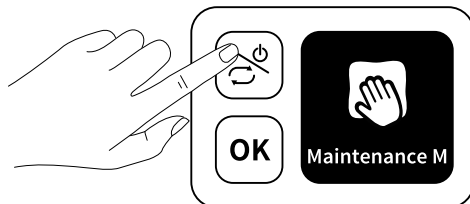

❷ When the opening of the cylinder faces up, pour in the cat litter, then press  to exit “Maintenance Mode”.

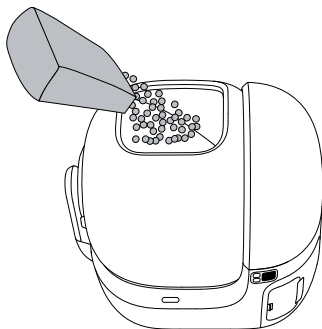


❸ Double press  and the device will automatically level cat litter.




 **Caution:** The amount of cat litter should not exceed the MAX line.

4.3 Empty The Waste Bin

❶ Open the door and pull the drawstring to pack the trash bag.

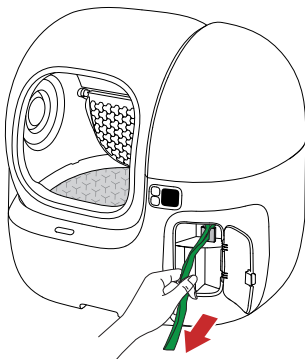


❷ Then pull out the waste bin and take out the packed trash bag.

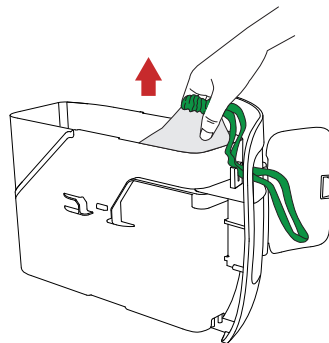


❸ Install a new trash bag.

Note: Please use the specialized trash bag.

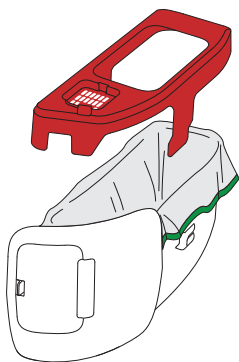

4.4 Description of Control Panel

① Press  on the control panel to switch functions, and press  to execute the selected function.

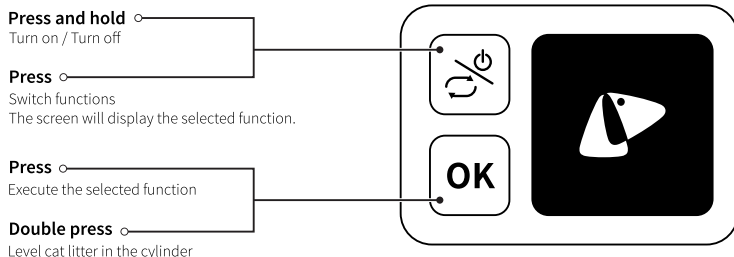

Description of Displayed Functions



Scoop

Automatically sift out clumps from cat litter.



Deodorize

Turn on the smart odor eliminator to remove odor.



Light

When there is not enough light, turn on the fill light in the camera to check the cylinder at night.



Level cat litter

Make cat litter evenly distributed in the cylinder.
Use it after adding cat litter.



Maintenance mode

Use it when adding cat litter or cleaning the device.



Empty cat litter

Empty all cat litter in the cylinder.



Reset


Adjust the cylinder to the correct position.



Connect to the network

Use it when binding the App.

2 Description of displayed status

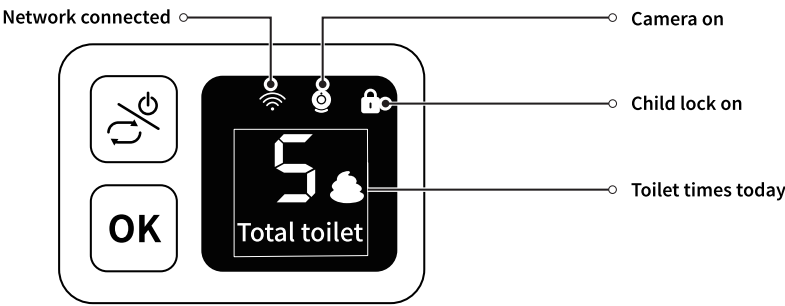

3 Description of other prompts


There will be scrolling text at the bottom of the screen to describe the current status.

Prompts	Description	Prompts	Description
 Cat enters	The cat enters while the device is in operation (the device will automatically pause and alert).	 Full waste bin	The waste bin is full. Please empty in time.
 Insufficient cat litter	The cat litter is insufficient. Please add in time.	 Magnetic side cover not installed	The magnetic side cover is not installed. Please check if it is in place.
 Device failure	Device failure, please check the details in the App.		

05 CLEANING AND MAINTENANCE

For the cat's health, it is recommended to regularly clean or replace these parts.


⚠ Caution: Please disconnect the power or turn off the device.

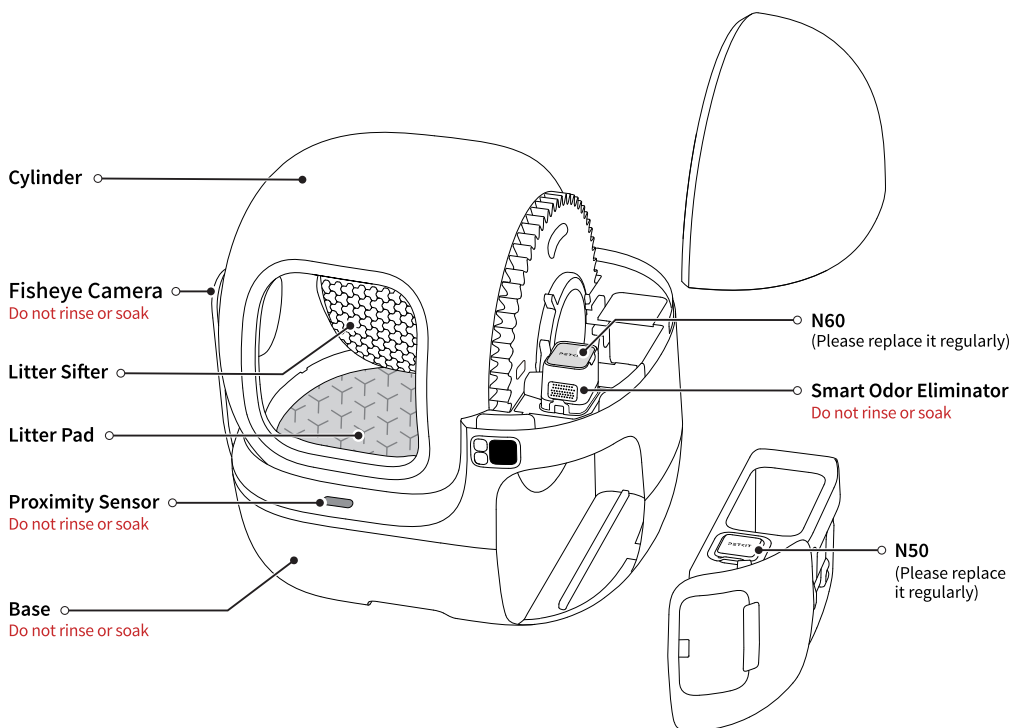

5.1 Empty Cat Litter Before Cleaning


Note: To avoid overflowing, please replace a new trash bag first.

❶ Align the magnetic cat litter remover with the litter sifter. Once there is a "Click" sound, the installation is successful.

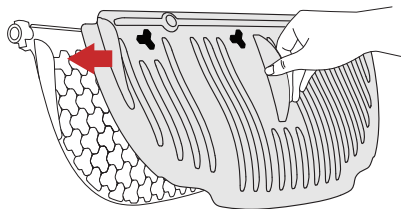

❷ Click "Empty" in the App, and empty the remaining cat litter in the cylinder according to the guide.


❸ After use, pinch the raised part on the left to remove the cat litter remover.

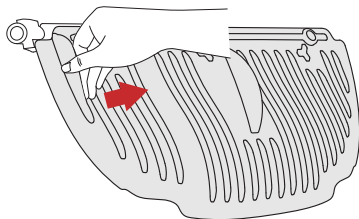


5.2 Detach Cylinder, Litter Sifter, and Litter Pad

Note: Before disassembly, please disconnect the power or turn off the device.


❶ Remove the magnetic side cover.

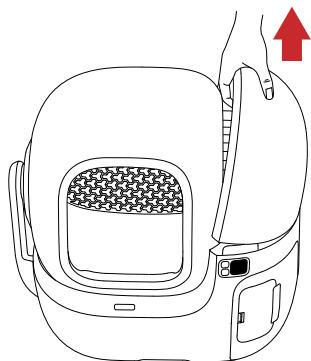


❷ Unlock the buckle.

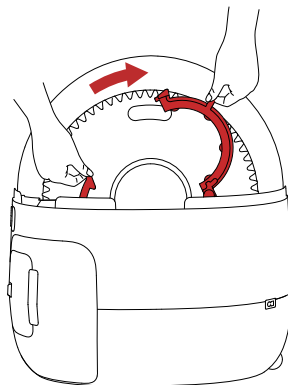


3 Remove the cylinder.

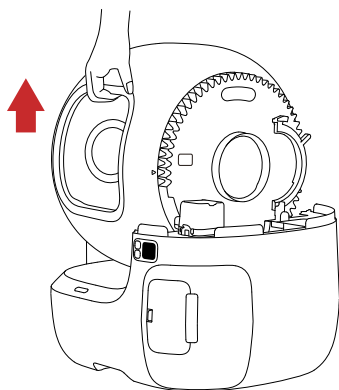


4 Place the cylinder against the wall.

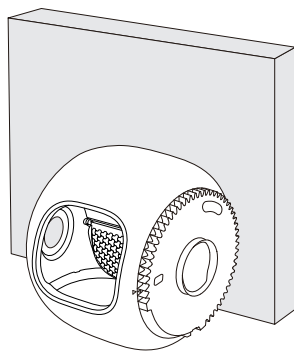


5 Grasp one side of the litter sifter.

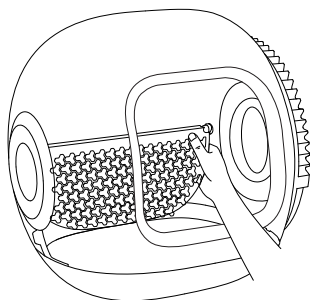

6 Press the litter sifter until it is bent and separates from two buckles (points A and B as shown), and take out the litter sifter.

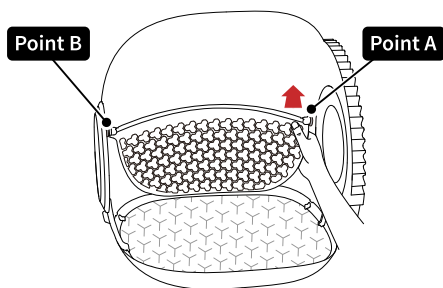


- ⑦ Pinch the handle of the litter pad to pull out the litter pad.

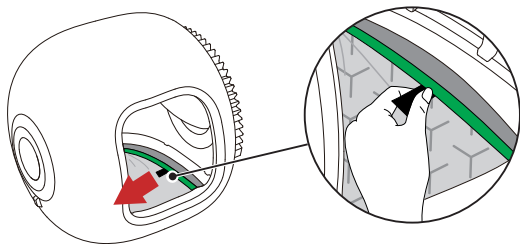

5.3 Clean Main Unit and Parts


⚠ Caution: Do not rinse or soak the main unit; otherwise, the device will be damaged. Only wipe it.

- ① Clean every corner of the cylinder with a brush and rinse it.

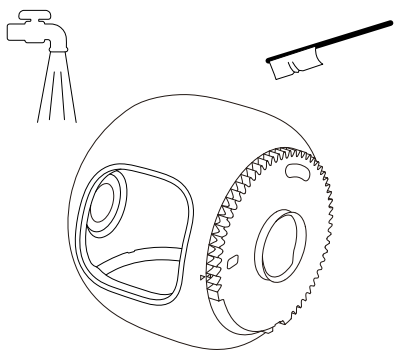

- ② Clean the litter sifter with a brush and rinse it. Wipe the litter pad with a wet towel.


Note: Do not vigorously scrub the litter pad to avoid damaging the surface coating. Do not clean with alcohol, disinfectant, bleach, non-neutral detergent, etc.

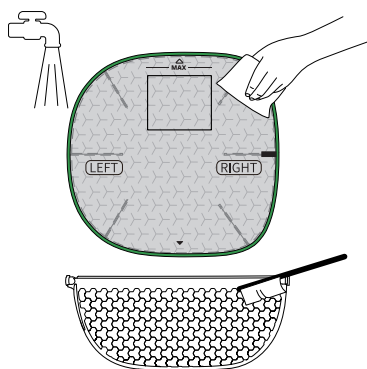

❸ Wipe the main unit with a wet tissue. Wipe the fisheye camera, smart odor eliminator, and proximity sensor with a soft cloth.



Fisheye camera

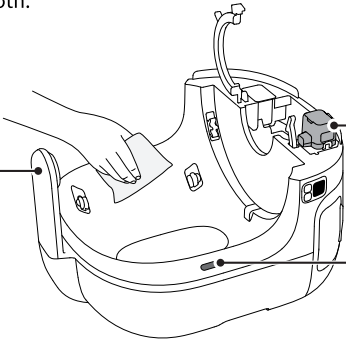

Smart odor eliminator



* Please regularly wipe the air inlet with a soft dry cloth to ensure it is unobstructed.

Proximity sensor

5.4 Install All Parts


⚠ Caution: Install all parts only when they are completely dry.

❶ Hold the litter pad, insert the top of it into the groove (arrows need to be aligned), then insert the bottom of it into the groove (arrows need to be aligned).

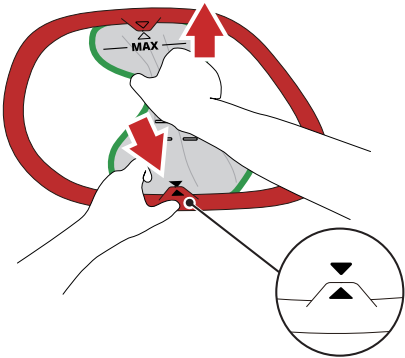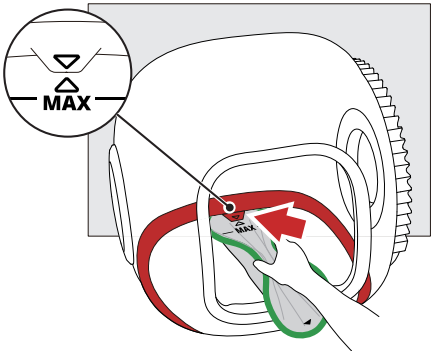

② Press gently and release the litter pad; its two sides will be automatically inserted into the groove.



Note: Please ensure that the green edge of the litter pad is fully stuck into the groove, and that the arrows on both ends align with the indicated direction.

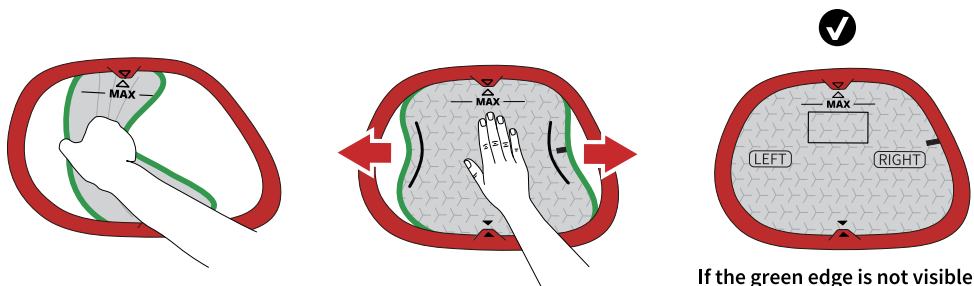

If the green edge is not visible, the installation is successful.


③ Place the litter sifter in the cylinder, and insert it into point A.

④ Grasp the litter sifter and press it until it is bent.

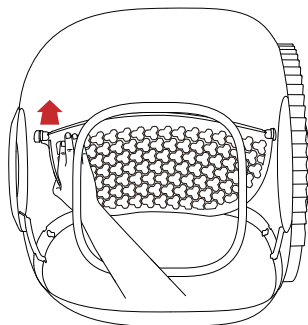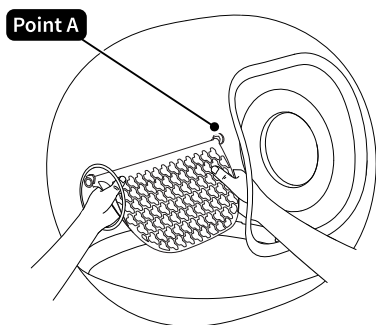


5 Insert it into point B.


Point B

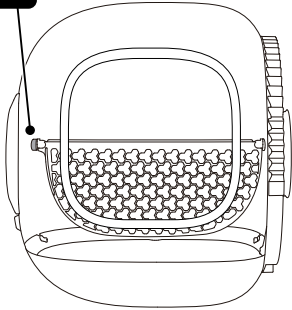


6 Please check: If the litter sifter can be shaken back and forth, the installation is successful.

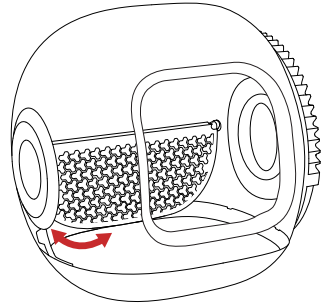

7 Put the cylinder on the base and lock the buckle, ensuring it is fastened.

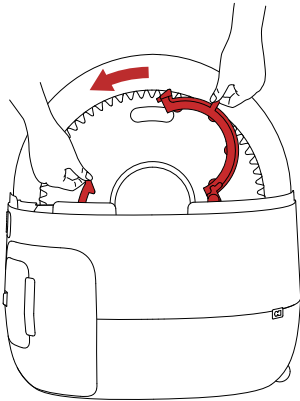

8 Install the magnetic side cover.

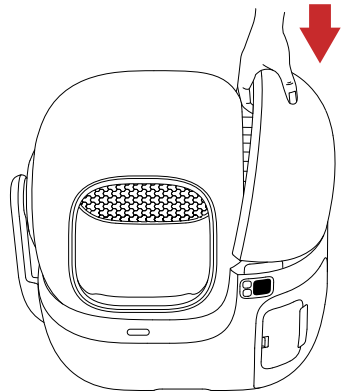

Parts	When to Clean	How to Clean	When to Replace	How to Detach	Caution
Cylinder	Clean it when the inner surface is dirty.	Clean it with a brush.	/	Refer to 5.2 - ①	/
Litter Sifter	Clean it in time when pets have loose stools.	Clean it with a brush.	Replace it when it is bent or broken.	Refer to 5.2 - ⑤	Avoid direct exposure to sunlight and do not squeeze.
Litter Pad	Clean it when it is dirty.	Wipe it with a soft cloth and water. Do not scrub.	Replace it when it sticks to cat litter severely or is broken.	Refer to 5.2 - ⑦	Do not clean with alcohol, disinfectant, bleach, non-neutral detergent, etc.
Base	Clean it after detaching the cylinder.	Wipe it with a wet tissue.	/	/	Do not rinse or soak.
Fisheye Camera	Clean it when the surface is dusty or dirty.	Wipe it with a soft cloth.	/	/	Do not rinse or soak.

06

VIDEO GUIDE

6.1 Video of Installation and Use



Scan to watch the video

6.2 Video of Cleaning and Maintenance



Scan to watch the video

| BASIC SPECIFICATIONS

Product Name	PETKIT PUROBOT MAX PRO 2 WITH CAMERA SELF-CLEANING CAT LITTER BOX
Product Model	P9904
Materials	ABS, PP, TPE, Silicone
Dimensions	538 x 657 x 603 mm (21.18 x 25.86 x 23.74 in)

Weight	about 11 kg (24.25 lbs)
Rated Input	12V  2A
Connection	Wi-Fi, BLE
Range of Application	Cats older than 6 months

| A MESSAGE TO OUR VALUED CUSTOMERS

- Thank you for choosing the PETKIT PUROBOT MAX PRO 2 WITH CAMERA SELF-CLEANING CAT LITTER BOX.
- Please read the user manual carefully before installing and using the product. Any installation or usage indicates that you have read and accepted the safety guide below.
- PETKIT is not responsible for or legally liable for any accidents or injuries resulting from the improper use of the product.
- PETKIT reserves the right to interpretation and revision.

| SAFETY INSTRUCTIONS

* Failure to follow the safety guides below may result in product malfunction or other unforeseen losses.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Please install and use the device according to the user manual.
- Kittens younger than 6 months old are prohibited from using this device. Cats weighing less than 1.5 kg are prohibited from using this device.
- Do not detach or drag the camera.
- Do not scratch the lens with sharp objects.
- Do not place the device in a high-temperature or high-humidity environment.
- Please use the device indoors. Avoid direct sunlight exposure and keep fire away.
- Although the device is powered by a low voltage, electric leakage may occur if the pet bites the power cable. Please keep your pets from biting the power cable.
- Please use only the original power adapter to avoid device damage or safety hazards.
- Place the device on a firm, level surface, and avoid touching the wall.
- Do not tilt the device to avoid safety hazards.
- Do not rinse or soak the bottom of the device.
- There are weight sensors at the bottom of the device. Please handle it with care.
- Please unplug it if the device is not used for an extended period.
- Children should use this device under the supervision and guidance of adults.
- Repairs should only be performed with professionals' guidance to avoid accidental damage.
- Do not place anything on the top of the device or press the top of it to avoid affecting the normal operation of the device.
- Before leaving for an extended period, please ensure that there is sufficient cat litter in the litter box and enough space in the waste bin.
- If you have any problems with the product, please contact our customer service for assistance.