

CYCLAMi

CY180



CY180

Bike Emoji Smart Brake Tail Light


Bicycle Tail Light Instruction Manual

Accessory List

- ① CY180 Tail light
- ② Seat cushion support
- ③ Seat post bracket
- ④ Seat Cushion Bracket Ties
- ⑤ Type-C USB

Tail light remote control (optional)

- ⑥ Taping Bracket
- ⑦ remote controls

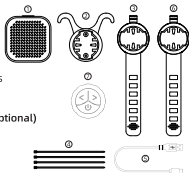

Specification

brightness	100 lumens
Emoticon	Built-in 14 patterns
Special function	Brake highlights, switching patterns, remote control turn signal (sold separately)
Battery	500mAh 3.7v
Battery Life	Constant light: 5 hours Different expressions: 12-30 hours
Material	ABS、PC
Waterproof	IPX6
Size	39x39x25mm
Weight	Approx.27g

Function keys



On/Off Long press for  two seconds to turn on/off, 30 seconds of standby at rest, 30 minutes of rest to turn off.

Toggle Click  to switch between different emoji patterns after powering on the computer.

Power Levels

Click  in the power off state to display the current remaining power.

Cochannel mode

Need at least two devices in the boot state to operate, the host side need to double-click  first, the screen displays , the secondary machine then double-click  to connect (after the successful connection of the host side of the switching pattern of the secondary machine will also change)

Remote mode

Tail light on the state of four consecutive click  screen display , then long press the remote control , the screen displays  connection success (remote control need to be purchased separately)

Smart Brake

The tail lights will always be brake-sensitive when on, and will automatically maximize brightness to alert the rear when braking is detected.

Battery level indication

Click the power button to check the remaining power in the off state, and the charging animation shows when charging.



100%



70%




50%



10%

Appearance



Remote Control Batteries (Remote control is optional)



Pry off the back cover with a screwdriver



Remove two screws from the board



Replacement of Coin Cell Battery CR2032

Caveat

Please do not shine the light directly to the eyes, so as not to cause damage to the eyes, long time lighting will dissipate heat, this is a normal phenomenon.

When the product is used for the first time out of the package, please let the tail light charge and discharge once first to ensure normal use.

Damage to the product caused by human damage or misuse is not covered by the warranty.

CYCLAMI products have a one-year after-sales warranty, more than one year maintenance charge for parts and transportation costs, in case of product problems can be contacted in the following ways.

Official website: www.cyclami.com

Aftermarket Email: cyclami@outlook.com

