




MINI PUMP

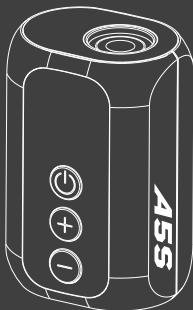


A5S

✉ Aftermarket Email: cyclami@outlook.com 🌐 Official website: www.cyclami.com
📍 Address: 2nd Industrial Building, 7th floor, No. 16, JINGLE Road Xiangzhou District, Zhuhai City, Guangdong Province.cn

Parts List


- ① Mini Pump
- ② Silicone Case
- ③ Air Tube
- ④ Type-C Charging Cable
- ⑤ Presta Valve Converter
- ⑥ Schrader Valve
- ⑦ Presta Valve
- ⑧ Ball Needle

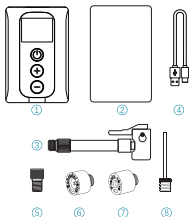

Specification

Working Current	2-6A
Battery	350mAh 7.4V
Charging method	Type-C
Size	65*42*33mm
Weight	≈98g
Max Pressure	100PSI/6.9Bar


Details

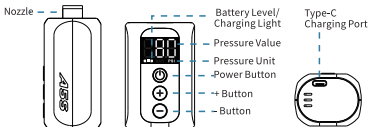

Connect the air valve


Air Nozzle Adaptation:

Directly using the tracheal interface: Select the nozzle, connect the nozzle to the intake valve, and ensure that the nozzle is in a tight pressure state during the inflation process.

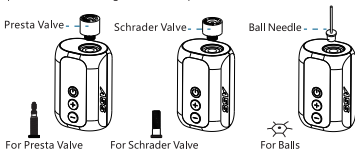

Installation of Tube:

Install the Tube and select the nozzle. When the position is narrow inconvenient to use air pump, it is recommended to choose correct connected Tube.

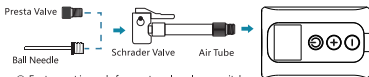


- ①. Factory set is ready for presta valve, please switch when using the schrader valve, and press the inflator firmly to avoid air leakage when using it.
- ②. The target air pressure value is above 80 PSI. Please connect the hose to avoid air leakage.
- ③. How to use: long press [On key] to start the machine, preset the tire pressure, click [On key] to open the inflatable after linking the tire nozzle to inflatable

⚠ Battery Safety

- ①. Use an adapter charging device to charge the pump (support fast charging)
- ②. Charging mode, Battery indicator light on, Battery level indicator flashes one by one. After charging complete, battery icon stays lighting.
- ③. Storing product for a long time, please charge it every three months.
- ④. Improper use of built-in lithium battery devices may damage the battery and cause danger. If product is damaged, do not use it. Do not disassemble, squeeze, or cut this product. If any leakage or odor is found, stop using immediately and dispose of the device/battery according to local regulations.

Key Function

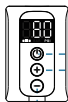

Pressure setting

Long press(power button),the screen will light up,and the default air pressure value is 100PSI.

Press[+]to increase air pressure,press[-]to decrease air pressure. After adjusting for 3 seconds,the screen will display the target air pressure value.

Simultaneously pressing the[+]and[-]keys can switch between PSI or BAR.



Start inflation

Short press the(power button)when the device is turned on,and the product will start inflating until it reaches the desired air pressure value. The product will automatically stop.

Shutdown

After use,long press the power button to turn off the device. The product will automatically shut down if there is no operation within 1 minute when turned on.

Product protection

- ①. When the product is continuously inflated for 1 minute and the air pressure remains below 5PSI,it automatically stops to prevent continuous ineffective operation.
- ②. After 3 minutes of continuous inflation,the product will automatically stop working to avoid abnormal situations that may cause continuous operation. If the inflation body is too large and does not reach the specified air pressure, the product inflation can be restarted.
- ③. When the internal temperature of the product exceeds the upper limit,it will immediately stop working and the screen will display the character(HOT).It is recommended to wait for the product to cool down before use.

Notes

- ①. The product may get hot during use,it is recommended to wear silicone sleeve for use.
- ②. During the inflation process,press and connect the air intake valve with the handheld product throughout the entire process.If you hear a sound of air leakage,please adjust to the pressing position or angle until the sound of air leakage disappears.
- ③. Ball inflation mode,the displayed air pressure value is higher than the actual air pressure.Please refer to the displayed pressure value after shutdown for accuracy.
- ④. When connecting TPU ultra light tires,please pay attention to the material of the intake valve.For non high temperature resistant materials,please make sure to connect the hose for use.
- ⑤. Mini pump is not a toy,please do not let children touch or even use it.
- ⑥. To ensure a good user experience,please check if the product's battery is sufficient before use.
- ⑦. Please do not inflate during the charging.